
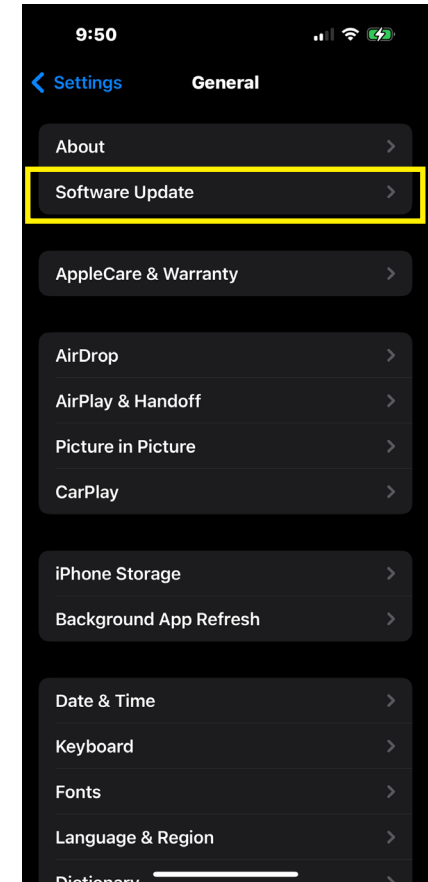


STEP 1: CHECK SOFTWARE

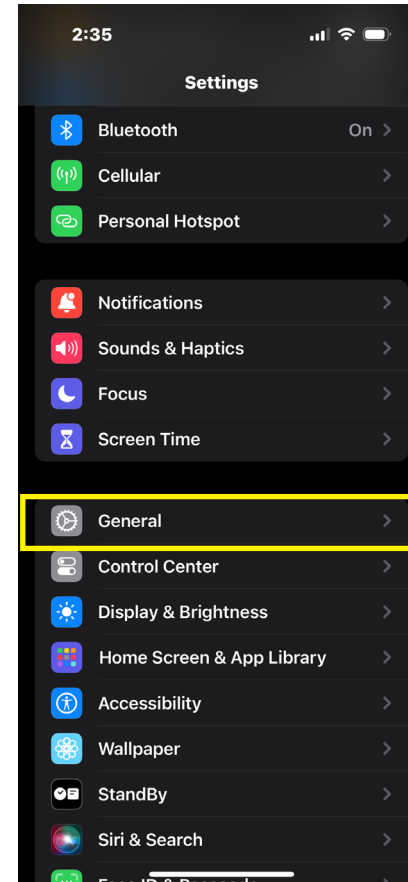


Before we change the camera settings on your iPhone. We should first make sure your phone has the latest software update. If your phone is using an older operating system, the camera settings might not look the same.

Choose the **“Settings”** icon on your phone

In **“Settings”** choose **“General”**

Then choose **“Software Update”**

STEP 1: CHECK SOFTWARE

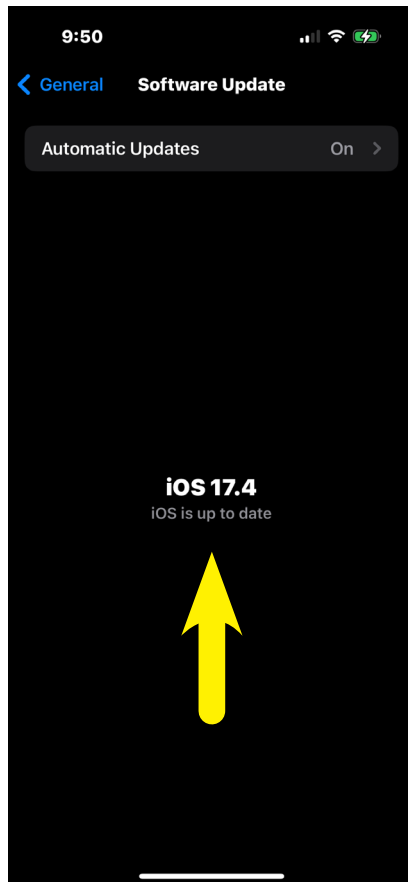

You should see a screen that shows you the version of the software that is running on your phone. As of March 10, 2024 The current version is **IOS 17.4** If you have an older version of the software, you will be prompted to update the software.


Please update your software on your phone before going to the next step.

STEP 2: CAMERA SETTINGS





Choose the “**Settings**” icon on your phone.

STEP 2: CAMERA SETTINGS

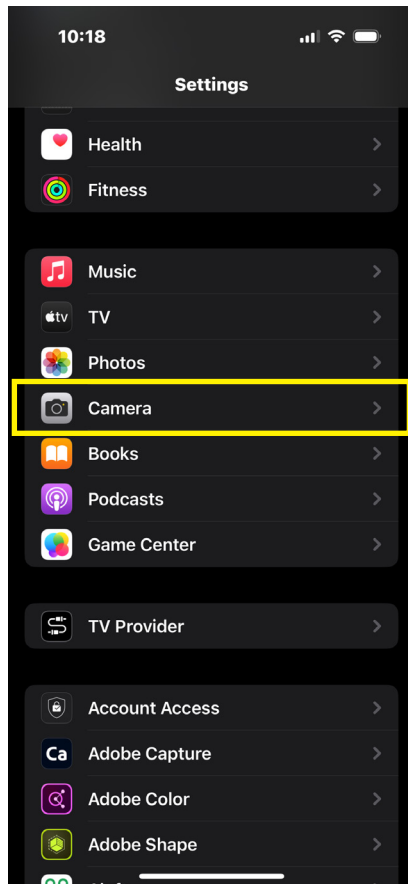


Scroll down to “**Camera**”. On my phone, the camera settings are towards the bottom.

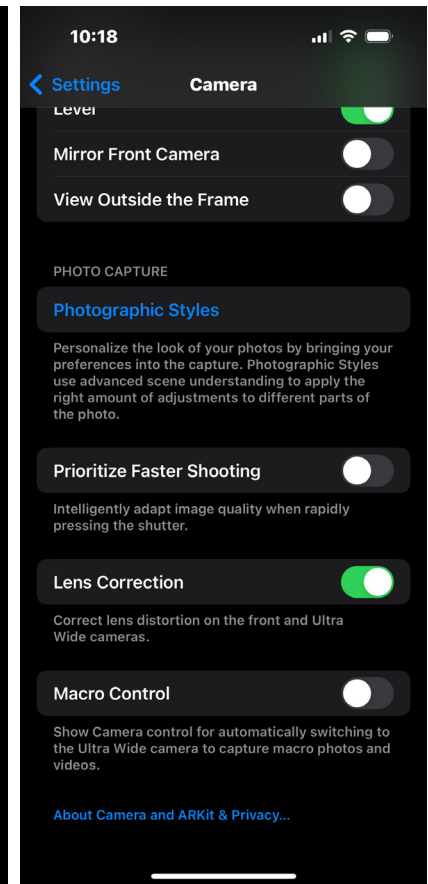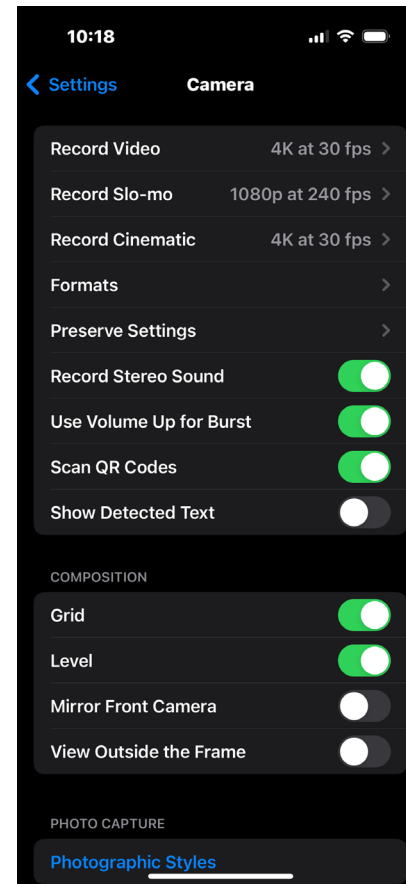


The two screen shots are actually one long scrolled screen. Turn on the settings that you see above.

STEP 2: CAMERA SETTINGS

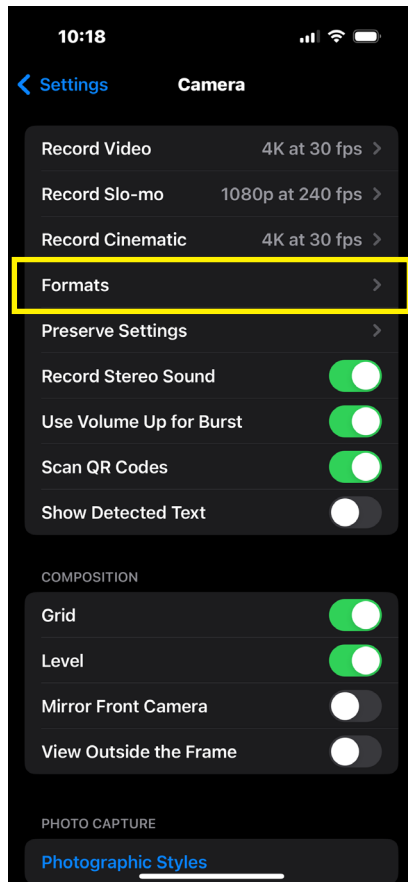


Next choose “**Formats**” in your camera settings.

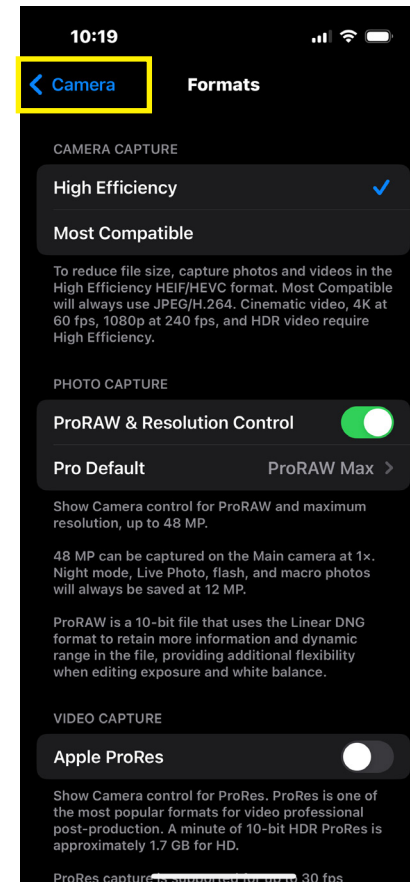



In the Formats screen make sure that “**High Efficiency**” is checked and **ProRAW & Resolution Control** is turned on. you should see “**Pro Default**” as “**ProRAW Max**”

When Finished go back one screen to camera settings by tapping the “< **Camera**” in the upper left hand corner.

STEP 2: CAMERA SETTINGS

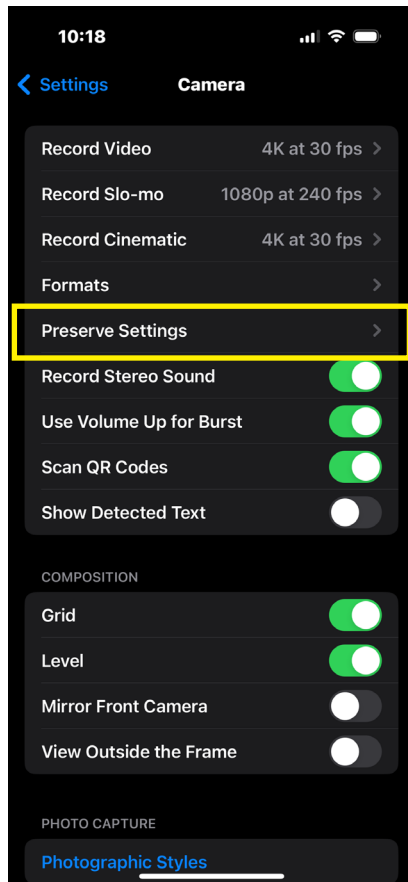

Next choose “**Preserve Settings**” in your camera settings.

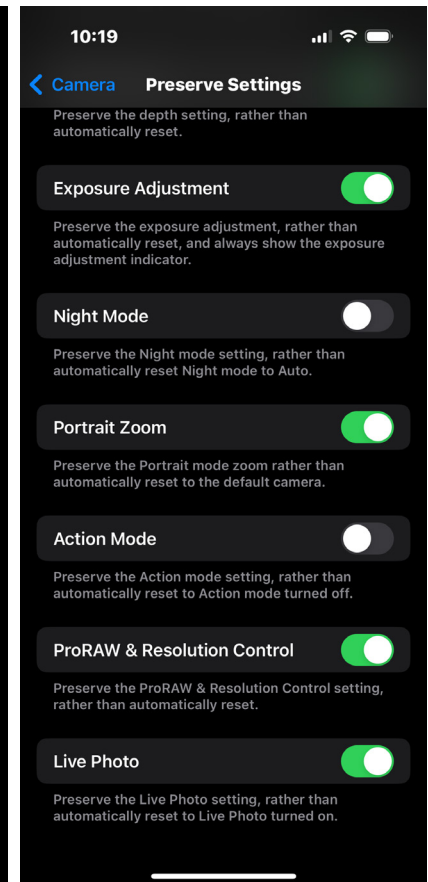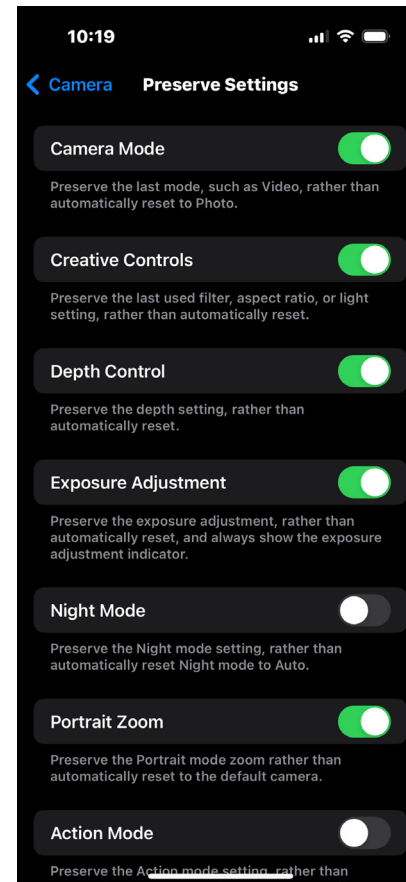


The two screen shots are actually one long scrolled screen. Turn on and off the settings that you see above.

STEP 3: TAKING PHOTOS



Choose the “**Camera**” icon to launch the phone camera

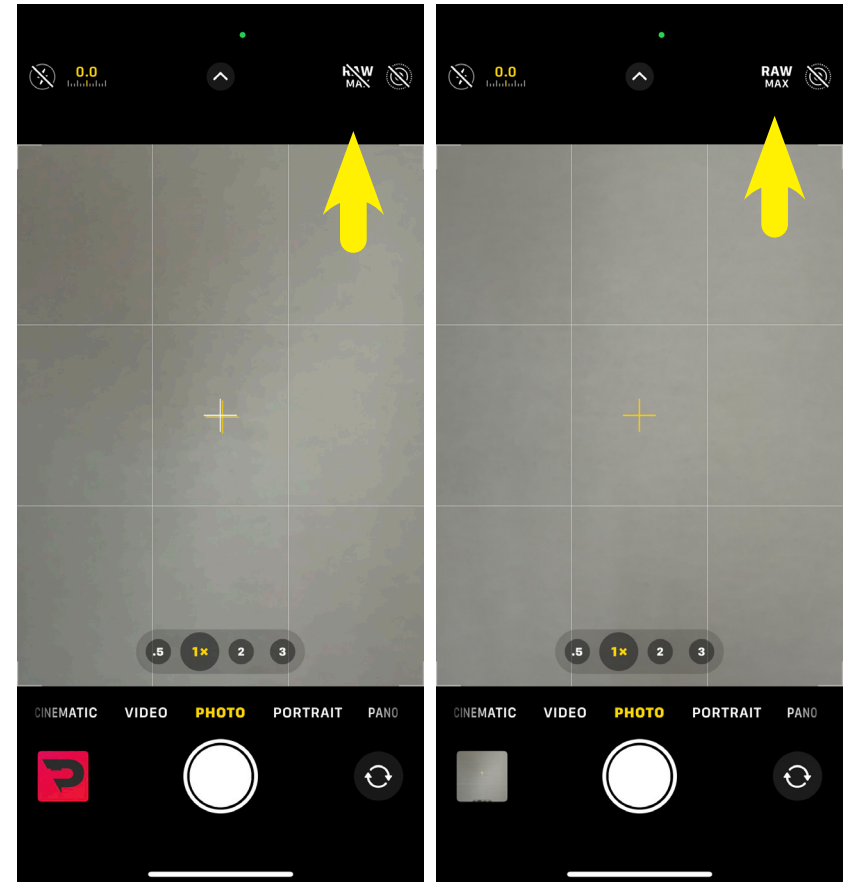

By default the Raw shooting mode is not turned on when you launch the camera app. You can tell if the Raw shooting mode is turned by looking at the upper right hand corner where you should see the words “**RAW MAX**”.

If the words “**RAW MAX**” have a line through them then the Raw shooting mode is not turned on.

Tap the words “**RAW MAX**” to turn on and tap again to turn off the Raw shooting mode

STEP 3: TAKING PHOTOS



The default image size when **RAW MAX** is turned off is a 12 megapixel image that is saved at a jpeg.

When **RAW MAX** is turned on and the **1x** lens is chosen, the new default image is 48 megapixels and the image is saved as a DNG file format. This file format is normally used for large Raw files.



Unfortunately the **1x** camera is the only camera that will shoot at 48 megapixels. If you choose any other lens like a **2x** or a **3x** or even the **.5** wide angle lens the images will revert back and be saved at 12 megapixels.

My suggestion is that you stay with the **1x** lens and if you need a closer shot, you physically get closer, and don't change lenses.

Make sure you are in “**photo**” mode and not in “**portrait**” mode.

STEP 3: TAKING PHOTOS



I would suggest taking your photos horizontally. This will be helpful to the NTMA for print publications. It is much easier to crop a horizontal image to a vertical image if they need to.

When you are finished taking photos using **RAW MAX**, make sure you turn off **RAW MAX** by tapping the words “**RAW MAX**”. When RAW MAX is turned off you will see a line through the words.


The space on your iPhone will fill up quickly if you take photos all the time at this large 48 megapixel file size.

STEP 4: REVIEWING PHOTOS




To review your images choose the “**Photos**” icon.

STEP 4: REVIEWING PHOTOS

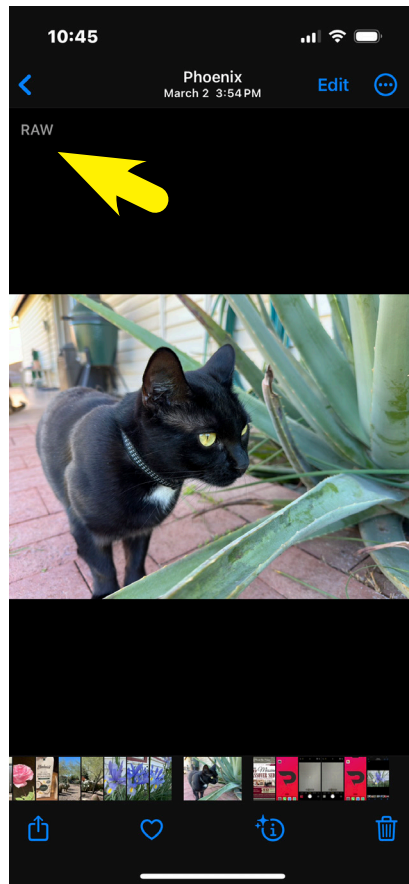

When looking at each photo individually, if the photo was taken in the **RAW MAX** mode, a light gray “**RAW**” can be seen in the upper left hand corner.

To see the actual information about the image and the file size. Touch anywhere on the photo and press down and firmly swipe upward towards the top of the screen.

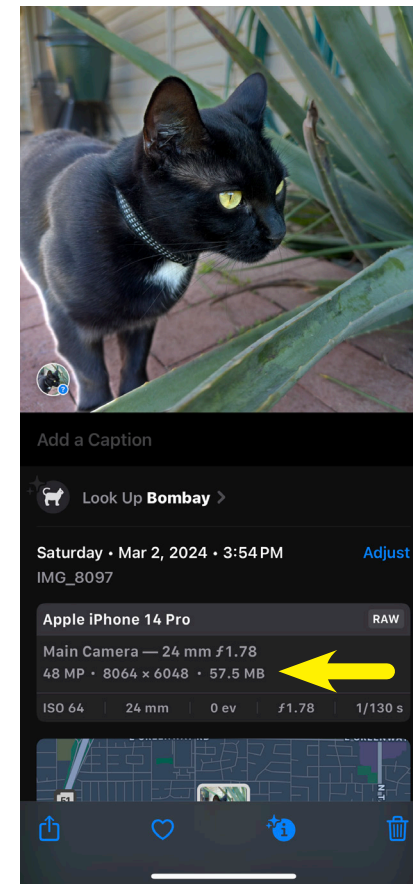

Swiping the photo upward will reveal the meta data for the image.

In this image you can see the date, time and location as well as the phone, camera lens, and most importantly the megapixel size.

The megapixel size of this image is **48 MP** and contains **8064 pixels by 6048 pixels**. When your finished, swipe back down on the image to get back to the regular photo view.

STEP 5: SENDING IMAGES



It will be very difficult to send 48 megabyte images through email. The images are just too large to be sent through email. Most email servers won't let attachments go through that are larger than 15 to 20 megabytes. Some email programs will compress the file size on purpose to make the files go through and we don't want that to happen.



The NTMA would like for you to mail your images to them using a USB thumb drive.

209 N. Crockett Street Ste #2
PO Box 2605
Fredericksburg, TX 78624