




NATIONAL TERRAZZO & MOSAIC ASSOCIATION

www.ntma.com

800.323.9736

GUIDE DETAIL # E-3

01/24

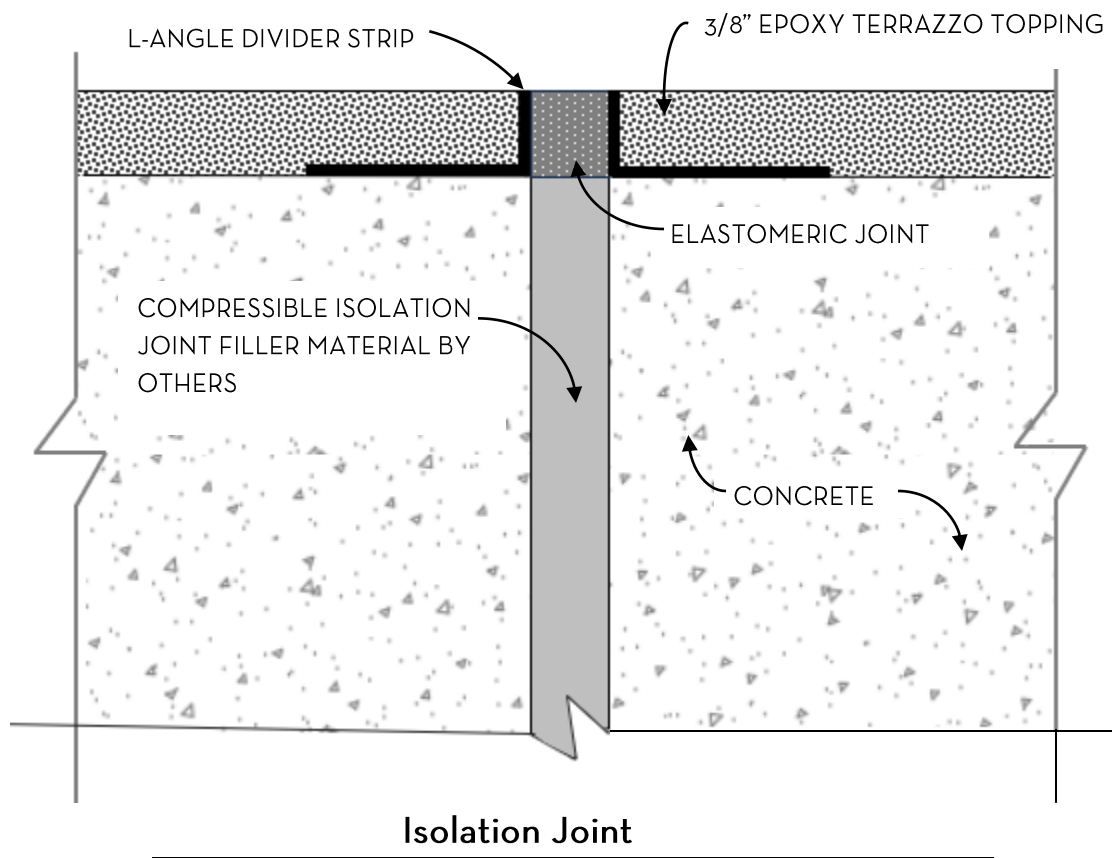

NOTES:

- This joint is designed to move in a horizontal plane and not a vertical plane.
- Isolation joints are used to separate a concrete slab from load bearing columns and walls.
- Terrazzo flooring must honor the isolation joint in concrete slabs.
- Squares edges in concrete are needed for proper divider strip placement.

General Disclaimer: The information provided in the Guide Detail is for general informational purposes only. Each project and individual application are unique. All information is provided in good faith; However, NTMA makes no representations or warranties of any kind, express or implied, regarding the accuracy, adequacy, validity, reliability, or completeness of any information provided herein.