


Detail 5. Construction Joint (Next Day Pour Where Joint Has Eased Shoulders or Has Opened.)

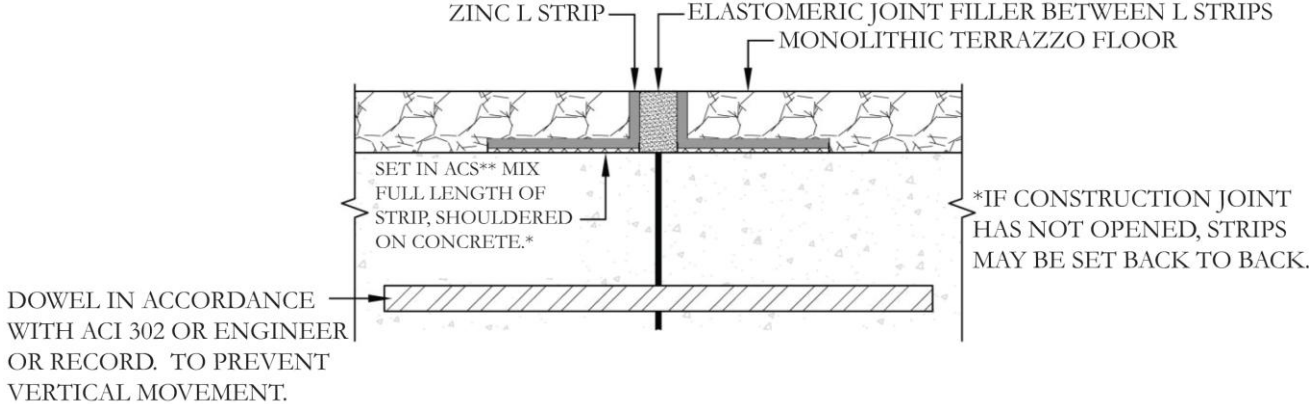

*Care should be taken by concrete contractor to provide a straight joint, placed in coordination with design teams consideration of final grid pattern. Square edges encouraged, tooled edges discouraged.
 ***ACS stands for Acrylic Cement Sand