


Detail 3. Optional Contraction Joint (also called saw cuts/control joints)

The term "Contraction Joint" is taken from ACI 302 document to maintain consistent nomenclature with the concrete and engineering industry.

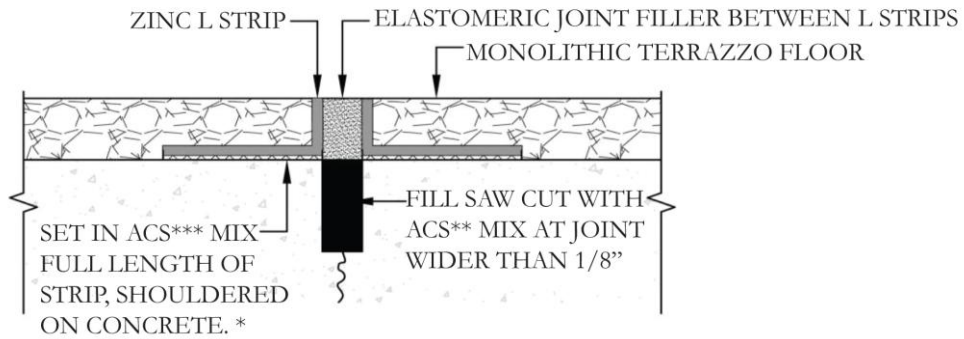

*Care should be taken by concrete contractor to provide a straight joint, placed in coordination with design teams consideration of final grid pattern. Square edges encouraged, tooled edges discouraged.

** This detail must be used for radiant heated floors

***ACS stands for Acrylic Cement Sand